

105g双胶185C+K 风琴折
双色印刷 75x95mm

Model: SJ-MPT61A

Product Overview

1.Mode switch

Short press:Mode switch
Long press: Disconnect Bluetooth
Double click: Enter/exit TWS Mode

2.Previous song/Volume down

Short press: Volume down
Long press: Previous song

3.Power On/Off/Indicator Light

Short press: Play/pause
Long press: Power on/off

4.Next song/Volume up

Short press: Volume up
Long press: Next song

5.Micro SD card Input

Connect a Micro SD card mode storage device

6.USB-C Charging

7.Microphone pickup hole

LED indicator/Prompt tone Guide

	Describe	Prompt tone	Status
Indicator Light	Indicator Light flashing	Power on tone	Power on
	All lights off	Power off tone	Power off
Indicator Light	Indicator Light flashing	-	Not connected
	Indicator Light stays on	Connected tone	Connected
Low battery	-	Low battery tone	-
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-
	After fully charged, the red charging indicator light turns off	-	-

Power/Charging

For better enjoyment, fully charge the speaker before use.
A USB-C charging cable (charge only) is included for standard USB compatible device.
Please use a 5V/1A or above power adapter (not included).
Caution: - Other incompatible charges may cause damages.
- Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.
To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.
Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

BLUETOOTH® Connection

- When first used and turned on, the speaker will automatically enter a waiting mode for connection.
- If the Bluetooth device is already connected, Press and hold for 2 seconds the " M " button disconnect the current connection so that you can connect to another device.
- The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.

When connecting, enable the Bluetooth function of the mobile phone, search for " JVC T61 " and connect. After the connection is successful, you will hear a prompt tone.

Music Control

Short press the " ⏮ " music can be played or paused,
Press and hold for 2 seconds the " ⏮ " to go to the previous song.
Press and hold for 2 seconds the " ⏭ " to go to the next song.

Call Mode

Answer a call: Short press the " ⏮ " button.
Reject a call: Double click the " ⏮ " button.

End the call: Short press the " ⏮ " button.

Volume Control

Short press the " + " button to turn up the volume.
Short press the " - " button to turn down the volume.

Connect Two Speakers, TWS Mode (Same Model Only)

- Turn on two " JVC T61 " speakers and do not connect to a Bluetooth device (such as a mobile phone).
- Double click the " M " button on one of the speakers , and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone.
- Enable the Bluetooth function of the mobile phone, search for " JVC T61 " and connect. After the connection is successful, you will hear a prompt tone.
- To exit TWS pairing mode, Double click the " M " button again, and you will hear a prompt tone.

Micro SD Card Playback

When speaker is on and micro SD card (not included) is inserted, micro SD card is the priority playback source. If you want to use Bluetooth function, press the " M " button to switch the source.

Power Saving Settings

- In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 15 minutes.
- Micro SD card mode, no music playback for 15 minutes, the speaker will be switched off automatically.

Reset Device

If the speaker needs to be reset, press and hold the " + " and " - " button for 3 seconds.

Caution

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

It is recommended to charge with a power adapter that has safety certification, with the suggested parameters being 5V/1A.

JVC is a trademark of JVCKENWOOD Corporation, used by Shenzhen Monster Creative Technology Co., Ltd. under license. This product is exclusively developed, manufactured, marketed, and serviced by Shenzhen Monster Smart Internet Co., Ltd. (Shenzhen Monster Creative Technology Co., Ltd.).

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Shenzhen Monster Smart Internet Co., Ltd is under license. Other trademarks and trade names are those of their respective owners.

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

[illegible]

封面