Model No: HJ-MH31BC

JVC

EARBONE PRO1

QUICK START GUIDE

Please read this Quick Start Guide carefully and keep it for future use.

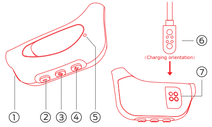

1.LED indicator
2.Previous song/Volume down
3. Multi Function Button (MFB)
4.Next song/Volume up
5. Microphone
6.USB cable
7.Charging contact

Power/Charging

For better enjoyment, fully charge the headphone before use.
The package includes a USB charging cable, which can be connected to the USB port of a computer for charging or charging with other compatible USB standard devices. Charging can be done using a 5V/1A or higher adapter (not included).
Caution:
- Use compatible standard 5 volt power adapter ONLY. Other incompatible chargers may cause damages.
Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the headphone, press and hold the " MFB " button for 3 seconds, you will hear a power on tone,the white light remains on for 2 second.
To turn off the headphone, press and hold the " MFB " button for 5 seconds, you will hear a power off tone,the red light stays on for 1 second.
Caution: If no Bluetooth device is connected, the headphone will turn off in 3 minutes with power off tone.

Pairing

When power on, the headphone will automatically enter pairing mode for connection, turn on Bluetooth function on your phone and search for **" JVC EarBone Pro1 "** for pairing. When the headphone is connected, a prompt tone will be heard, red and white indicator lights are off.

Music

Play/Pause: Click" MFB " button
Previous song: Connected mobile phone status, double-click " - " button
Next song: Connected mobile phone status, double-click "+"button

Call

Answer a call: Short press the" MFB " button
End the call: Short press the" MFB " button
Reject a call: Long press the" + " button

Volume Control

Short press the " - " button to turn down the volume
Short press the" + " button to turn up the volume

Mode Switching

TF Card Mode/Bluetooth Mode: Double-click the " MFB " button
Note: TF card mode allows for connection to a computer via a magnetic charging cable, enabling the transfer of songs and their storage to the headphones.

Switch between Chinese and English voice prompts

Change language: Triple-tap the " + " button.

Running Mode

Press and hold thee " + " button to enter or exit running mode. After finishing your run, you can check your workout data in the app. During exercise, triple-tap the " - " button to have the earbuds announce real-time information (distance in meters/kilometers, duration, pace, and heart rate).

Exercise Mode

Press thee " + " button four times to enter or exit exercise mode. After completing your workout, you can view your fitness data in the app. During exercise, heart rate will be announced every five minutes.

Voice Assistant

To enable/disable voice assistant: Long press the " - " button.

Reset

When the device is powered on, press the "MFB" button continuously for 5 times. The headphones will then restart, clear the pairing information and successfully restore to factory settings.

LED Indicator Guide

Status	Description	Voice Prompt
Power On	The white light on 2s and then turn off	Power on tone
Power Off	The red light on 1s and then turn off	Power off tone
Pairing	Red and white indicator lights flash alternately	-
Bluetooth connected	The red and white alternately flashing indicator light went off	Connected tone
Battery low	red indicator light is on for 1 second every 5 seconds.	Battery low tone
Charging	When charging, the red indicator light comes on. After the battery is fully charged, the white light stays on continuously	-
USB connection to the computer	The white light stays on continuously	-

Cautions
*Self replacement of battery is prohibited.
*Do not expose battery (battery pack or battery pack combination) in direct sunlight, fire or high temperatures.
*The model approval code (CMIIT ID) of the radio transmission equipment of this device has been printed on the product body in silk screen.

JVC is a trademark of JVCKENWOOD Corporation, used by Shenzhen Monster Creative Technology Co., Ltd. under license.

This product is exclusively developed, manufactured, marketed, and serviced by Shenzhen Monster Smart Internet Co., Ltd. (Shenzhen Monster Creative Technology Co., Ltd.).

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Shenzhen Monster Creative Technology Co.,Ltd is under license. Other trademarks and trade names are those of their respective owners.

⚠ Safety Warnings and Precautions

To ensure your safety and extend the service life of this product, please strictly follow the warnings below:
1. Environmental Warnings
• Do not use this product in extremely high or low temperatures, or in dusty or humid environments.
• Avoid direct sunlight, fire exposure, or any overheating conditions.
• In environments with strong wireless signals or dense crowds (such as airports, stations, exhibitions, etc.), intermittent connection or interference may occur. This is within normal range. Please continue to use the device later or change the usage environment.
2. Operational Safety Warnings
• Do not drop, strike, or subject the product to strong vibrations.
• Do not disassemble or modify the device without authorization to avoid hazards or damage.
• If any abnormal condition occurs, stop using the product immediately and contact your distributor.
3. Battery and Charging Warnings
• When the charging case indicator shows low battery, please recharge in time. If the product is not used for a long period, please recharge it at least once every 30 days.
• Use power adapters that comply with national standards and are LVD-certified.
• The earbuds contain built-in batteries. Do not expose them to high temperatures or flammable environments.
• If the charging port of the earbuds contains foreign objects or has poor contact, gently clean the charging port with a cotton swab dipped in alcohol. Regular cleaning is recommended to ensure proper charging and power-on/off functions.
4. Important Notes
• If there are updates or changes to product functions, please refer to the official website or the sales page for the latest information.
• Please keep this manual for future reference.

Model No: HJ-MH31BC

JVC

EARBONE PRO1

快速指南

请仔细阅读快速指南并妥善保存以备将来使用
本产品由中国平安保险公司承保

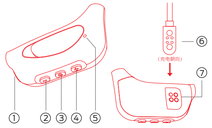

1.LED指示灯
2.上一曲/音量减
3.多功能键(MFB)
4.下一曲/音量加
5.麦克风
6.充电线
7.充电触点

电源/充电

为了更好的使用体验,在使用耳机前,您需要先为其充满电。
包装中包含了一条USB充电线,可以与电脑USB端口连接充电或其他兼容USB的标准充电设备,使用5V/1A或以上适配器(不包含)进行充电。
注意:仅使用电脑USB输出或标准5伏电压电源适配器进行充电,如果使用非标准5伏USB电源适配器进行充电,可能会造成损坏,如果连接器或设备潮湿或损坏,请勿充电。

开机/关机

在关机模式下,按住"MFB"键3秒以开启耳机,可听到开机提示音,白灯长亮2秒。
如要关闭耳机,请再次按"MFB"键5秒,可听到关机提示音,红灯长亮1秒。
注意:开机后如没有连接蓝牙设备,耳机关闭在三分钟内关闭。

蓝牙配对

耳机开机后,将自动进入待连接模式,启用手机的蓝牙功能,搜索**" JVC EarBone Pro1 "**进行连接,连接成功后你会听到提示音,红,白色指示灯熄灭。

音乐

播放/暂停:单击MFB键
上一曲:已连接手机状态,双击" - "键
下一曲:已连接手机状态,双击" + "键

通话

接听来电:短按" MFB "键
结束通话:短按" MFB "键
拒接来电:长按" + "键

音量控制

短按" - "键调低音量
短按" + "键调高音量

模式切换

TF卡模式/蓝牙模式:双击" MFB "键
注意:TF卡模式,可使用磁吸充电线连接电脑,传输歌曲存储到耳机

切换中英文提示音

切换语言:三击" + "键

跑步模式

长按" + "键进入/退出跑步模式。结束跑步后,可前往APP中查看运动数据;运动过程中三击" - "键,耳机实时播报(跑步的米/公里数、运动时间、配速、心率)

锻炼模式

四击" + "键,进入/退出锻炼模式。结束锻炼后,可前往APP中查看运动数据;锻炼过程中,每五分钟播报一次心率

语音助手

启用/关闭语音助手:长按" - "键

清除配对信息

开机状态下连续5击" MFB "键后,耳机重新开机,清除配对信息。恢复出厂设置成功。

LED指示灯&语音指南

模式	描述	语音/声音提示
开机	白色指示灯亮2秒熄灭	开机提示音
关机	红色指示灯长亮1秒熄灭	关机提示音
蓝牙等待连接	红、白色指示灯交替闪	-
蓝牙已连接	红、白色交替闪指示灯熄灭	连接提示音
低电	红色指示灯每5秒红灯亮1秒	低电提示音
耳机充电	红色指示灯亮, 充满后白灯长亮	-
USB连接电脑	白灯长亮	-

注意

*不建议未经许可私下更换电池。
*电池(电池组或电池组合)不得暴露在阳明,烘烤或类似过热的环境中。
*本设备的无线电发射设备型号核准代码(CMIIT ID)已印制在产品本体丝印上。
"JVC"是JVCKENWOOD株式会社的注册商标,由该公司授权深圳市魔声创新技术有限公司使用。

本产品由深圳市怪兽智能互联网有限公司(深圳市魔声创新技术有限公司)独家研发、制造、营销与服务。

" Bluetooth®"这一标识及相关标志均为蓝牙技术联盟公司(Bluetooth SIG, Inc.)的注册商标。Shenzhen Monster Creative Technology Co.,Ltd对这些标识的使用均需获得授权许可,其他商标及商号均为其各自所有者的财产。

产品合格证
QC PASS 02 检验合格
检验员:
生产、检验日期:见产品封签或标识码

▲安全警示与注意事项

为确保您的安全并延长产品使用寿命,请严格遵守以下警示内容:
一、使用环境警告
• 禁止在极端高温、低温、多尘或潮湿环境中使用本产品。
• 避免阳光直射、火烤或任何过热环境。
• 在强无线信号或人群密集的环境(如机场、车站、展会等),可能出现耳机连接断续或干扰现象,正常范围,请稍后继续使用或更换使用环境。
二、操作安全警告
• 请勿摔落、撞击或剧烈震动产品。
• 禁止擅自拆解或改装本机,以免造成危险或损坏。
• 若出现异常情况,请立即停止使用并联系经销商。
三、电池与充电警示
• 当充电仓指示灯提示电量低时,请及时充电。产品闲置未长期使用时,请每如天内充电一次。
• 使用符合国家标准并获得LVD认证的电源适配器。
• 耳机仓内置电池,请勿置于高温或可燃环境中。
• 当耳机充电接口有异物且接触不良时,请用棉签沾酒精轻轻擦拭清洁耳机充电接口。要保持定期清洁耳机充电口,以保证正常充电与开关机的功能。
四、重要提示
• 产品功能如有变更,如未及时通知,请关注产品官网或销售链接;
• 请妥善保管本说明书以备查阅。

产品有毒有害物质或元素表

本表格依据SJ/T11364-2024的规定编制

部件名称	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溶性多溴联苯(PBDB)	多溶性多溴二苯醚(PBDE)	邻苯二甲酸二(2-乙基己基)酯(DEHP)	邻苯二甲酸丁苄酯(BBP)	邻苯二甲酸二丁酯(DBP)	邻苯二甲酸二异丁酯(DIBP)
塑料外壳	○	○	○	○	○	○	○	○	○	○
连线	○	○	○	○	○	○	○	○	○	○
喇叭	○	○	○	○	○	○	○	○	○	○
主板	○	○	○	○	○	○	○	○	○	○
电池	○	○	○	○	○	○	○	○	○	○
金属部件	○	○	○	○	○	○	○	○	○	○

○表示该有害物质在该部件的均质材料中的含量低于GB/T26572规定的限量要求以下。
X表示该有害物质至少在该部件的均质材料中的含量超过GB/T26572规定的限量要求。

保修信息卡

信息填写

产品名称:

产品型号:

产品SN号:

购机日期:

用户信息

用户姓名:

联系电话:

地　　址:

75X95MM 105G双胶+4C印刷+风琴折