105g双胶 风琴折
185C+K印刷 75x90mm

封面

Model:SJ-MDK70A

JVC

K70

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

Product Overview

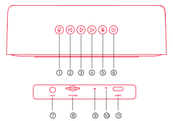

1.Voice Assistant
2.Previous song/Volume down
Short press: Volume down
Long press: Previous song
3.Play/Pause
Short press: Play/pause
Answer a call/End the call
Long press: Reject a call
4.Next song/Volume up
Short press: Volume up
Long press: Next song
5.Bluetooth mode
Short press: Disconnect Bluetooth
Double click: Enter/exit TWS Mode
6.Power On/Off
Long press: Power on/off
Short press: Mode switch
7. AUX Input
External audio devices can be connected using audio cables
8. Micro SD card Input
Connect a Micro SD card mode storage device
9.RESET
10.Charging Indicator Light
11.USB-C Charging

LED indicator/Prompt tone Guide

	Describe	Prompt tone	Status
⏻	The white light stays on	Power on tone	Power on
	All lights off	Power off tone	Power off
✱	The white light flashing	-	Not connected
	The white light stays on	Connected tone	Connected
Low battery	-	Low battery tone	-
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-
	After fully charged, the red charging indicator light turns off	-	-

Power/Charging

For better enjoyment, fully charge the speaker before use.
A USB-C charging cable (charge only) is included for standard USB compatible device.
Please use a USB power adapter with DC 5V/3A or higher specifications (not included) for charging.
Caution: • Other incompatible charges may cause damages.
- Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.
To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.
Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

BLUETOOTH® Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.
• If the Bluetooth device is already connected, Short press the " ✱ " button disconnect the current connection so that you can connect to another device.
• The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.
When connecting, enable the Bluetooth function of the mobile phone, search for " **JVC K70** " and connect. After the connection is successful, you will hear a prompt tone.

Music Control

Short press the " ▷ " music can be played or paused.
Press and hold for 2 seconds the " ⏮ " to go to the previous song.
Press and hold for 2 seconds the " ▷ " to go to the next song.

Call Mode

Answer a call: Short press the " ▷ " button.
Reject a call: Press and hold for 2 seconds the " ▷ " button.
End the call: Short press the " ▷ " button.

Volume Control

Short press the " ▷ " button to turn up the volume.
Short press the " ⏭ " button to turn down the volume.

Voice Assistant

When Bluetooth is connected, short press the " ♀ " button to enable/disable the voice assistant.

Connect Two Speakers, TWS Mode (Same Model Only)

1. Turn on two " **JVC K70** " speakers and do not connect to a Bluetooth device (such as a mobile phone).
2. Double click the " ✱ " button on one of the speakers , and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone.
3. Enable the Bluetooth function of the mobile phone, search for " **JVC K70** " and connect. After the connection is successful, you will hear a prompt tone.
4. To exit TWS pairing mode, Double click the " ✱ " button again, and you will hear a prompt tone.

Micro SD Card Playback

When speaker is on and micro SD card (not included) is inserted, micro SD card is the priority playback source. If you want to use Bluetooth function, press the " ⏻ " button to switch the source.

AUX IN Playback

When speaker is on and audio source is inserted via AUX IN (not included) , AUX IN is the priority playback source. If you want to use Bluetooth function, press the " ⏻ " button to switch the source.

Power Saving Settings

•In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 15 minutes.
•AUX IN mode/ Micro SD card mode no music playback for 15 minutes, the speaker will be switched off automatically.

Factory Data Reset

If the speaker needs to be reset, press and hold the " ▷ " button for 5 seconds.

Reset Device

If the speaker needs to be reset, press the reset button with a card pin.

Caution

•It is not recommended to replace the battery privately.
•The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

JVC is a trademark of JVCKENWOOD Corporation, used by Shenzhen Monster Creative Technology Co., Ltd. under license. This product is exclusively developed, manufactured, marketed, and serviced by Shenzhen Monster Smart Internet Co., Ltd. (Shenzhen Monster Creative Technology Co., Ltd.).

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Shenzhen Monster Creative Technology Co., Ltd is under license. Other trademarks and trade names are those of their respective owners.

Model:SJ-MDK70A

JVC

K70

快速指南

请仔细阅读本快速指南并妥善保存以备将来使用
本产品由中国平安保险公司承保

产品概述



1.语音助手
2.上一曲/音量减
短按：调低音量
长按：上一首歌
3.播放/暂停
短按：播放/暂停/接听来电/结束通话
长按：拒接来电
4.下一曲/音量加
短按：调高音量
长按：下一首歌
5.蓝牙模式
短按：断开/回连蓝牙
双击：进入/退出TWS连接
6.电源开/关机
长按：开机/关机
短按：切换模式
7.AUX输入接口
使用音频线（不包含）可以连接外接音频设备
8.TF CARD插入接口
连接 TF CARD（不包含）存储设备
9.复位按键
10.充电指示灯
11.USB-C充电接口

LED 指示灯 / 提示音指南

	描述	提示音	状态
⏻	白色指示灯长亮	开机提示音	开机
	所有灯熄灭	关机提示音	关机
✱	白色指示灯闪烁	-	未连接
	白色指示灯长亮	连接成功提示音	已连接
低电提示	-	低电提示音	-
音响充电	充电中, 红色指示灯长亮	-	-
	充满电, 红色指示灯熄灭	-	-

电源/充电

为了更好的使用体验,在使用音响前,您需要先为其充满电。
包装中包含了一条USB-C充电线（仅充电,无数据传输功能）,请使用 DC 5V/3A 及以上规格的 USB 电源适配器（不含）充电。
注意：- 其它不兼容的充电线可能会造成损坏。
- 如果连接线或设备潮湿、损坏, 请勿充电。

开机/关机

在关机模式下, 按住 " ⏻ " 键2秒开启音响, 可听到开机提示音。
关闭音响, 请再次按住 " ⏻ " 键2秒, 可听到关机提示音。
注意：开机后如没有连接到蓝牙设备，音响大约在15分钟后关闭。

蓝牙配对

•首次使用并开机时, 音响将自动进入配对模式。
•如已连上蓝牙设备,短按" ✱ "键, 即可断开当前连接,以便与其它设备进行配对。
•如没有连上蓝牙设备，音响也会自动进入配对模式。
连接时, 启用手机的蓝牙功能, 搜索" **JVC K70** "进行连接, 连接成功后你会听到提示音。

音乐控制

短按" ▷ "键, 可播放或暂停音乐。
长按2秒 " ⏭ " 键, 可播放上一首歌。
长按2秒 " ▷ " 键, 可播放下一首歌。

通话控制

接听来电：短按 " ▷ " 键。
拒接来电：长按2秒 " ▷ " 键 。
结束通话：短按 " ▷ " 键。

音量控制

短按" ▷ "键调高音量。
短按" ⏭ "键调低音量。

语音助手

已连接蓝牙状态，短按" ♀ "键启用/关闭语音助手。

连接两台音响, TWS模式（只限于相同型号）

1.打开两台 " **JVC K70** " 音响, 在开机状态并且没有连接蓝牙设备 (如手机)。
2.在其中一台音响上双击" ✱ "键, 会听到提示音, 两台音响将会自动配对,连接成功后,会听到提示音。
3.启用手机上的蓝牙功能, 搜索" **JVC K70** "进行连接, 连接成功后你会听到提示音。
4.如要退出TWS配对模式，再次双击 " ✱ "键, 会听到提示音。

TF CARD模式播放

开机时,TF CARD (不包含) 插入音响后, 会以TF CARD为优先播放, 届时如需用蓝牙播放时, 短按" ⏻ "键来切换音源。

AUX IN模式播放

开机时,外接AUX IN音源输入后, 会以外接AUX IN音源为优先播放, 届时如需用蓝牙播放时, 短按" ⏻ "键来切换音源。

省电设置

•音响开机后, 如没有连接到蓝牙设备, 大约在15分钟后自动关机。
•在AUX IN模式/ TF Card模式, 15分钟未播放音乐将自动关机。

恢复出厂设置

在开机状态下, 长按" ▷ "键5秒, 即可恢复出厂设置。

复位

如果音响需要复位, 请用卡针按下复位按键。

注意

•不建议未经许可私下更换电池。
•电池(电池组或电池组合)不得暴露在诸如日照、火烤或类似过热环境中。

本设备的无线电发射设备型号核准代码 (CMIIT ID) 已印制在产品上。

"JVC"是JVCKENWOOD株式会社的注册商标。由该公司授权深圳市魔声创新技术有限公司使用。
本产品由深圳市怪兽智能互联网有限公司(深圳市魔声创新技术有限公司)独家研发、制造、营销与服务。

" Bluetooth® "这一标识及相关标志均为蓝牙技术联盟公司 (Bluetooth SIG, Inc.) 的注册商标。Shenzhen Monster Creative Technology Co., Ltd 对这些标识的使用均需获得授权许可。其他商标及商号均为其各自所有者的财产。

产品合格证

产品有害物质成分表格										
本表格依据SJ/T11364-2024的规定编制。										
部件名称	铅（Pb）	汞（Hg）	镉（Cd）	六价铬（Cr(VI)）	多溴联苯（PBB）	多溴二苯醚（PBDE）	邻苯二甲酸二（2-乙基）己酯（DEHP）	邻苯二甲酸丁苄酯（BBP）	邻苯二甲酸二丁酯（DBP）	邻苯二甲酸二异丁酯（DIBP）
电路板	×	○	○	○	○	○	○	○	○	○
扬声器	×	○	○	○	○	○	○	○	○	○
电池	○	○	○	○	○	○	○	○	○	○
塑料	○	○	○	○	○	○	○	○	○	○
金属	○	○	○	○	○	○	○	○	○	○
连接线	○	○	○	○	○	○	○	○	○	○
包装	○	○	○	○	○	○	○	○	○	○

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

QC PASS 02 检验合格

检验员：_____

生产、检验日期：见产品封签或标识码

保修信息卡

信息填写

产品名称：_____

产品型号：_____

产品SN号：_____

购机日期：_____

用户信息

用户姓名：_____

联系电话：_____

地　　址：_____